 


Pulsante a filo ghiera tasto Ø 30


Plastic ring protected pushbutton - Button Ø 30

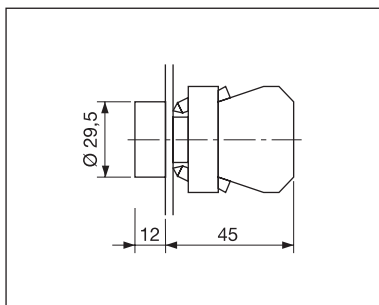

Versione / Version	Colore / Colour	Codice / Code
	Nero <i>Black</i>	ECX 3100
	Rosso <i>Red</i>	ECX 3101
	Verde <i>Green</i>	ECX 3102
	Giallo <i>Yellow</i>	ECX 3103
	Blu <i>Blue</i>	ECX 3104
	Bianco <i>White</i>	ECX 3105

Pulsante a filo ghiera - marcia/arresto

 
Plastic ring protected pushbutton - on/off

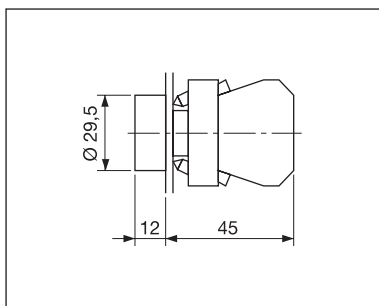

Versione / Version	Colore / Colour	Codice / Code
	Rosso <i>Red</i>	ECX 3106
	Verde <i>Green</i>	ECX 3107
	Nero <i>Black</i>	ECX 3106/N
	Bianco <i>White</i>	ECX 3107/B

Pulsante a filo ghiera - con freccia

 
Plastic ring protected pushbutton - with arrow

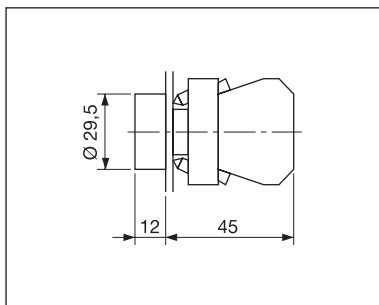

Versione / Version	Colore / Colour	Codice / Code
Freccia bianca orizzontale <i>White horizontal arrow</i>	Nero <i>Black</i>	ECX 3108
Freccia bianca verticale <i>White vertical arrow</i>	Nero <i>Black</i>	ECX 3109

Pulsante sporgente

 Extended pushbutton

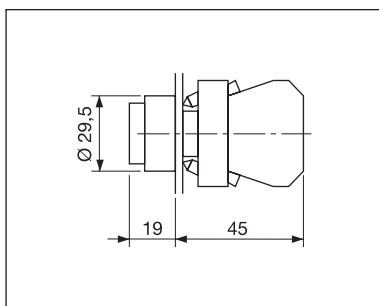

Versione / Version	Colore / Colour	Codice / Code
	Nero <i>Black</i>	ECX 3110
	Rosso <i>Red</i>	ECX 3111
	Verde <i>Green</i>	ECX 3112
	Giallo <i>Yellow</i>	ECX 3113
	Blu <i>Blue</i>	ECX 3114
	Bianco <i>White</i>	ECX 3115